



Apollo 301

PROGRAMMING INSTRUCTIONS

(Dual Mode Version)

For additional assistance please call
Prime Access (877)333-1003

Button Function During Programming

- (:) Right Key: Used to confirm and complete each step of programming.
- (v) Left Lower Key: Used to change the value of flashing digit.
- (^) Left Upper Key: Used to move the cursor from left to right.

Entering Programming Mode

Remove the battery and wait at least five seconds.

Re-install the battery while holding **v** until “FLES” appears on the display.

Programming Procedure

To program as a Flex pager, press (:).

To switch to pocsag format, press (v) then press (:).

Use the keys described above to set the proper frequency. Press (:) to go to the next screen.

“1: 0001234567 ” should appear on the display. This is the current capcode. Use the keys described above to make changes to the capcode, then press (:) to go to the next screen.

Note: This screen can accept up to 10 digits, however, Flex capcodes have a maximum of 9 digits. Remember to leave the proper number of zeros to the left of the capcode.

“2: - - - - - ” should appear on the display. This is the secondary capcode, and is only used if the pager is to have multiple capcodes. If needed, use the keys described above to enter the capcode, or press (:) to go to the next screen. This pager can accept up to 4 capcodes.

After the fourth capcode screen, the word “PASS” will be displayed. . The programming is complete and the pager turns off.