

Synthesized Pager Programming Directions

XL-2000 Apollo pager



- *TO PROGRAM PAGERS, REMOVE BATTERY AND HOLD DOWN BUTTON 2. INSERT BATTERY AND HOLD BUTTON DOWN UNTIL "PASS 0000". OR FREQUENCY SHOWS IN THE DISPLAY
- * PRESS BUTTON 3 TO CHANGE TO FREQUENCY SCREEN.
- * TO CHANGE FREQUENCY PRESS BUTTON 2 TO CHANGE THE NUMBER (1,2,3, ETC) AND BUTTON 1 TO MOVE TO THE NUMBER TO THE RIGHT. WHEN FREQUENCY IS COMPLETE PRESS BUTTON 3 TO MOVE TO THE NEXT SCREEN CAPCODE
- *TO CHANGE THE CAPCODE FOLLOW THE STEPS ABOVE TO CHANGE THE NUMBERS AND PRESS BUTTON 3 TO MOVE TO THE NEXT CAPCODE SCREEN
- * BAUD RATE – TO CHANGE THE BAUD RATE PRESS BUTTON 2 TO CHANGE BETWEEN 512 , 1200, 2400. PRESS BUTTON 3 WHEN DONE.
- *Pass "0000" – THIS IS THE LAST SCREEN. A PASSWORD CAN BE ENTERED HERE TO PROTECT THE PAGER. USE BUTTON 2 TO CHANGE THE NUMBER AND BUTTON 1 TO MOVE TO THE NUMBER TO THE RIGHT.
- * PRESS BUTTON 3 UNTIL "PASS" SHOWS AND THE PAGER BEEPS. THIS CONFIRMS THE PAGER HAS BEEN PROGRAMMED.

www.abollowireless.com